

Adding the WS4 controller, as a Slave controller in the WS4 system.

APPLICATION NOTE

Web Access


Adding the WS4 controller, as a Slave controller in the WS4 system.

C019

How to reset the WS4 to factory defaults.

WS4-1D Factory reset procedure.

- Unplug the TCP/IP network cable from the WS4 Controller.
- Put both DIP Switch 1 and 2 to ON position.
- Wait for the blinking green LED (COM).
- When LED COM starts blinking green, open and close DIP 1 3 times in 10 seconds.
- Next, the green LED starts blinking very fast, initializes it and factory default is done.
- Note: It is advisable to perform a complete reset to factory default settings on the WS4 before adding Slave Controller if WS4 is used as Master or Slave in another installation.

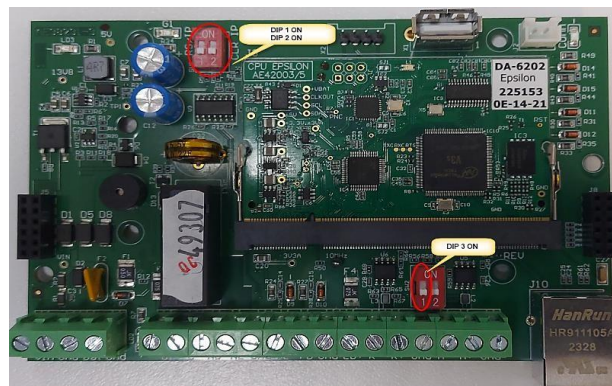

WS4-4D Factory reset procedure.

- Unplug the TCP/IP network cable from the WS4 Controller.
- Wait for the blinking green LED (COM).
- When LED COM starts blinking green, open and close DIP 4 3 times in 10 seconds.
- Next, the green LED starts blinking very fast, initializes it and factory default is done.
- Note: It is advisable to perform a complete reset to factory default settings on the WS4 before adding Slave Controller if WS4 is used as Master or Slave in another installation.

