


APPLICATION NOTE

ONLine Access

How to connect any XPR network biometric reader to Paxton's Net2 Controller

A038

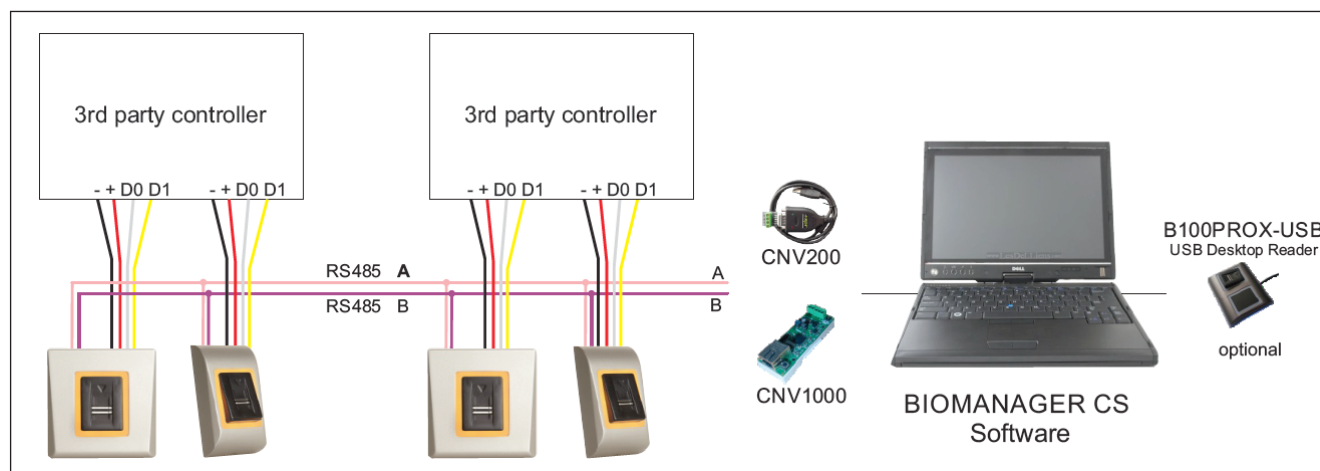

- Connect the readers to the third party controller (D1, D0, +12V and GND)
- Connect all the Readers' RS485 network in daisy chain
- Connect the RS485 line to the PC with 1 of the 3 possible converters CNV200 (RS485 to USB) and CNV1000(RS485 to TCP/IP)


Note1: Only 1 converter is needed per installation, not per reader.

Note2: The software for enrollment of fingers, assignment of a number to a fingers is BioManager. It is not necessary the software to run all the time, only when new fingers are being enrolled.

SETTINGS IN THE NET2 SOFTWARE

- For reader Type select Wiegand reader, not the Paxton readers

Wiegand Reader should be selected

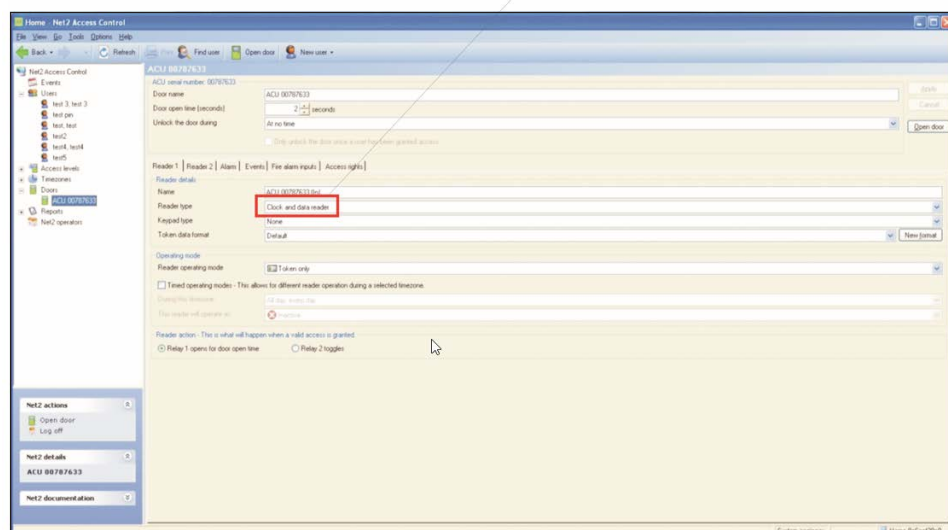

Note: If the user enrolled in Net2 has card ID number: 123456, enroll a finger with the BIOMANAGER CS software and give that finger (fingers) the same ID Number: 123456.